

How to

Fit a 'F' connector to your existing co-axial cable.

Deeper Image Television
201 Elgar Road Surrey Hills
Victoria 3127

03 9808 6999
showroom@deeperimage.com.au




F connectors provide better connections and greater shielding which is a benefit when using digital signals.

You will need a sharp knife and an F connector.

Deeper Image Television have packs of twist-on F connectors which have a connector for RG59 and RG6 cable.

It is a dual pack because we do not know which size cable you have.
Part no. FC6-FC59 - P Choose the appropriate connector for your cable.

1. Strip the outside of the cable to 12mm. (diag 1.)
2. Strip the next layer to 6mm. (diag 2.)
3. Pull back the strands back along the outside of the cable. (see diag 3.)
4. Twist on the 'F' connector clockwise. (diag 4.)
5. The tip of the wire should protrude approximately 1.5 - 2mm out of the end of the 'F' connector. (diag 5.)

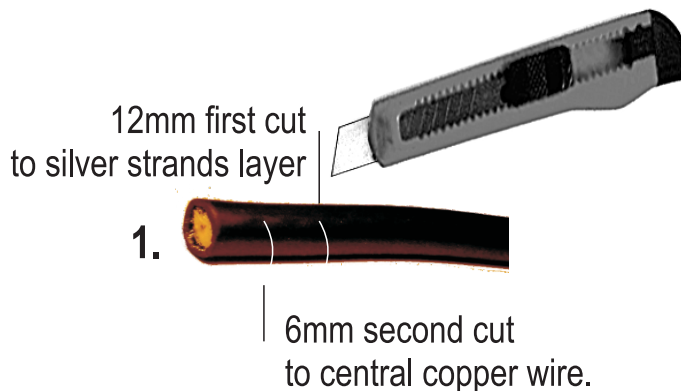

NOTE: Do not scratch or mark.

